


ROLACASE POST HEIGHT REFERENCE GUIDE

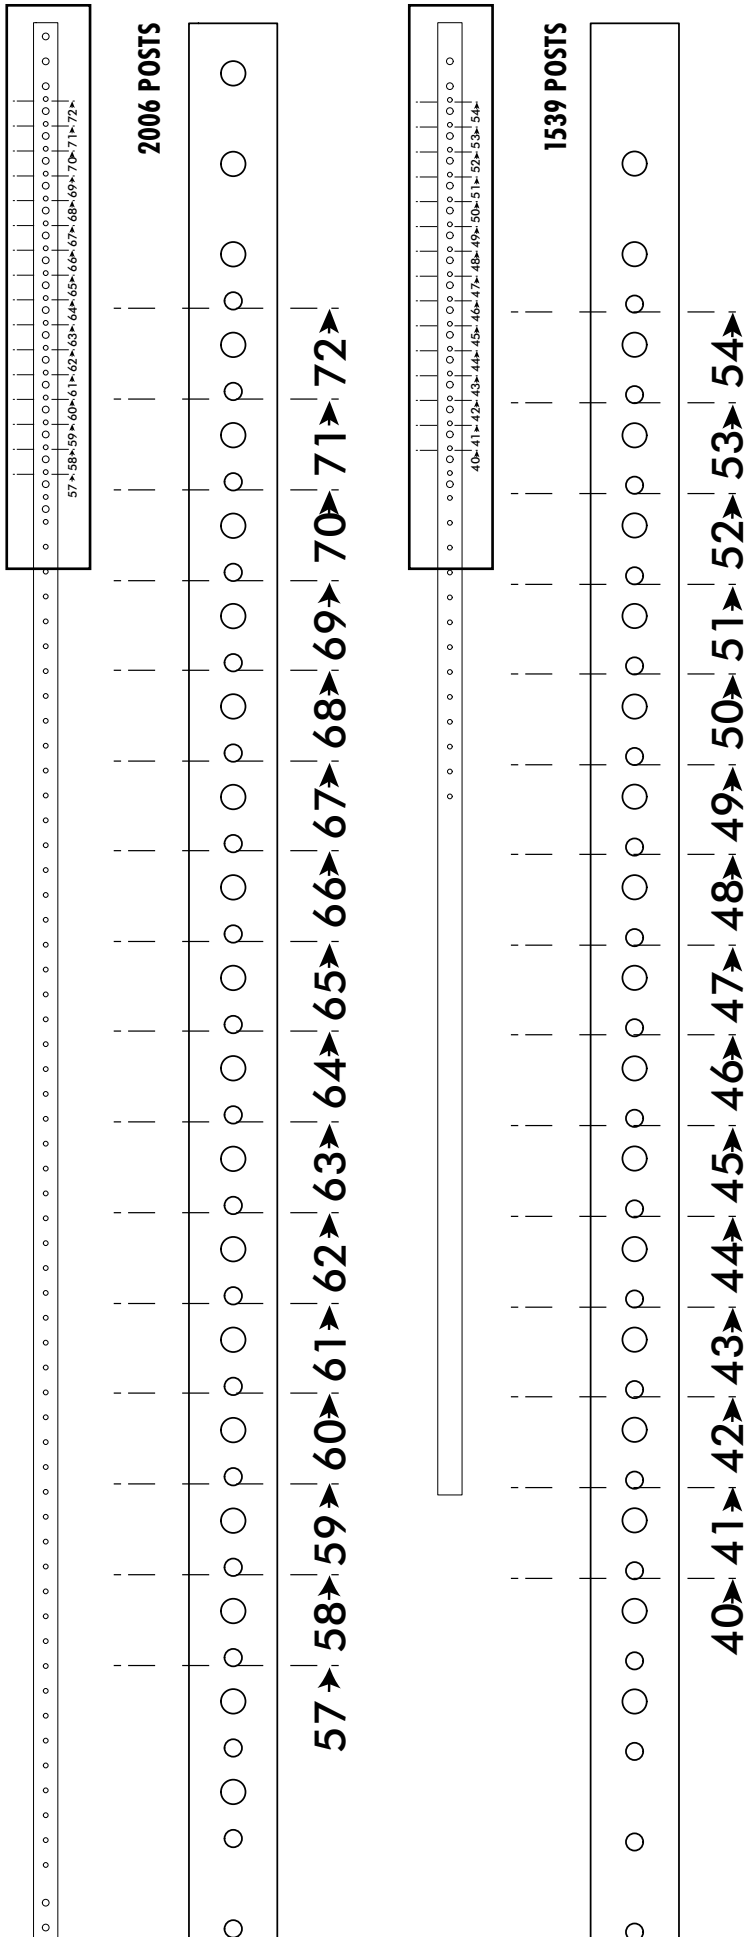

These instructions are to be used in conjunction with our vehicle specific roof anchors only (sold separately)

- 1** Check which posts matches your vehicle and ensure you have the correct posts for your vehicle model
- 2** See which number matches your vehicle
- 3** On the back of the package box (where you received your posts) you will find a guide to scale, you can use this guide to cut at the desired number

Vehicle	Product Code that suits your vehicle	Cut at Number	Actual Height
Chevy Express 135"/155"WB	RSSF/HD/80/1539 RSEFR/HD/80/1539 RSSFR/HD/120/1539 RSEFR/HD/120/1539	46	49.1"
Ford Transit Low Roof 130"/148" WB	RSSF/HD/80/1539 RSEFR/HD/80/1539 RSSFR/HD/120/1539 RSEFR/HD/120/1539	47	50.1"
Ford Transit Mid Roof 130"/148" WB	RSSF/HD/80/2006 RSEFR/HD/80/2006 RSSFR/HD/120/2006 RSEFR/HD/120/2006	63	66.5"
Ford Transit High Roof 148" WB	RSSF/HD/80/2006 RSEFR/HD/80/2006 RSSFR/HD/120/2006 RSEFR/HD/120/2006	71	74.7"
Ram ProMaster Standard Roof 118"/136"WB	RSSF/HD/80/2006 RSEFR/HD/80/2006 RSSFR/HD/120/2006 RSEFR/HD/120/2006	58	61.4"
Ram ProMaster High Roof 136"/159" WB	RSSF/HD/80/2006 RSEFR/HD/80/2006 RSSFR/HD/120/2006 RSEFR/HD/120/2006	68	71.6"

Please note: This height guide is designed to go on the bare floor of the vehicle. However these heights will still work with an added floor of up to 3/4" thick

For more information please check our YouTube Channel RolaCase or go to our support page on our website at www.rolacase.com