

⚠ ATTENTION: PLEASE READ ALL INSTRUCTIONS BEFORE ASSEMBLING/INSTALLING THIS PRODUCT

INCLUSIONS:

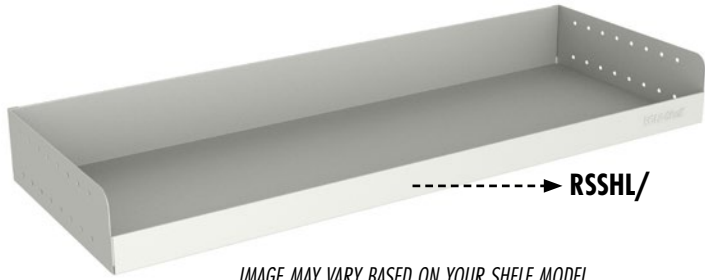


IMAGE MAY VARY BASED ON YOUR SHELF MODEL

⚠ WARNING

ANY ALTERATIONS, UNINTENDED OR UNAPPROVED WORK/USE OF THIS PRODUCT COULD CREATE A HAZARDOUS CONDITION THAT CAN CAUSE DEATH, PERSONAL INJURY OR PROPERTY DAMAGE.

BEFORE YOU BEGIN:

- THE AVERAGE EXPECTED INSTALL TIME FOR THIS PRODUCT IS **8 MINUTES**
- READ ALL THE INSTRUCTIONS BEFORE ASSEMBLY & INSTALLATION
- ALWAYS WEAR APPROPRIATE PERSONAL PROTECTIVE EQUIPMENT, ESPECIALLY EYEWEAR WHEN INSTALLING OUR PRODUCTS
- CONFIRM YOU HAVE ALL THE NECESSARY PARTS, TOOLS, EQUIPMENT, & TIME REQUIRED BEFORE COMMENCING

PART No. RSSHL/ shelving range to suit the following

• All "8-Series" shelving bays (8 Series Start Frame- RSSFR/HD/80/1539 or 2006, (8 Series Extension Frame- RSEFR/HD/80/1539 or 2006) & "12-Series" shelving bays (12 Series Start Frame- RSSFR/HD/120/1539 or 2006, 12 Series Extension Frame- RSEFR/HD/120/1539 or 2006) (sold separately), **this is where you will find screws and plastic plugs to fit the shelves**

⚠ ATTENTION

All RolaShelf shelving products are to be used exclusively and in conjunction with RolaCase and RolaShelf shelving bays only. Failure to do so will cause the shelving/products to perform in a nonfunctional manner and will void your warranty

TOOLS AND HARDWARE REQUIRED:






*included in our Start and Extension Frames

⚠ ATTENTION

IMAGES USED IN THIS GUIDE MAY VARY SLIGHTLY DEPENDING ON YOUR MODEL




The following RolaCase shelves are designed to fit the 8-SERIES RolaCase shelving bays that are constructed out of one or both of the following part #'s: 8 Series Start Frame - RSSFR/HD/80/1539 or 2006 Or 8 Series Extension Frame - RSEFR/HD/80/1539 or 2006 (sold separately)

8 Series Shelving Range (33" wide)

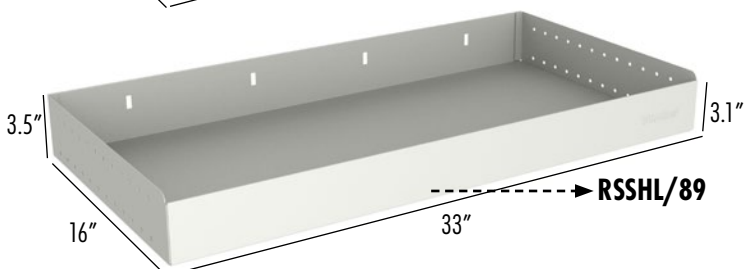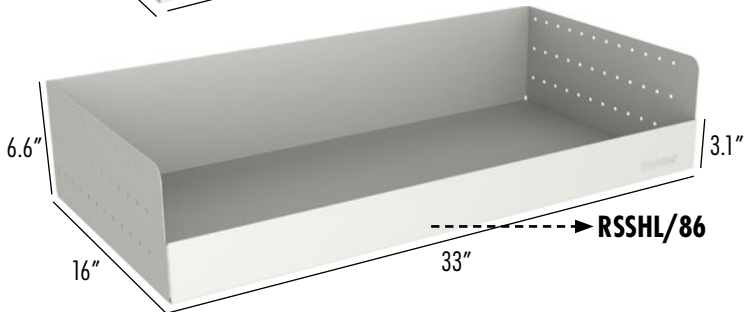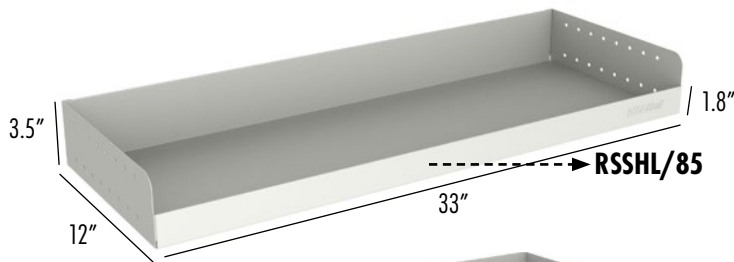

The following RolaCase shelves are designed to fit the 12-SERIES RolaCase shelving bays that are constructed out of one or both of the following part #'s: 12 Series Start Frame- RSSFR/HD/120/1539 or 2006 or 12 Series Extension Frame - RSEFR/HD/120/1539 or 2006 (sold separately)

12 Series Shelving Range (49.6" wide)

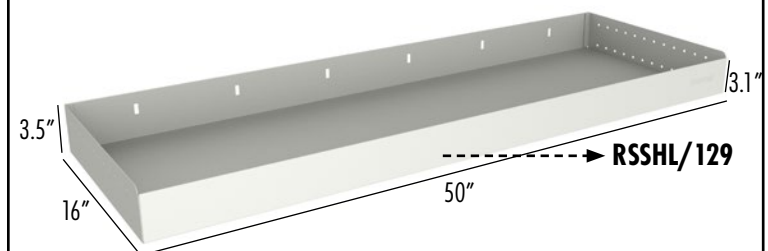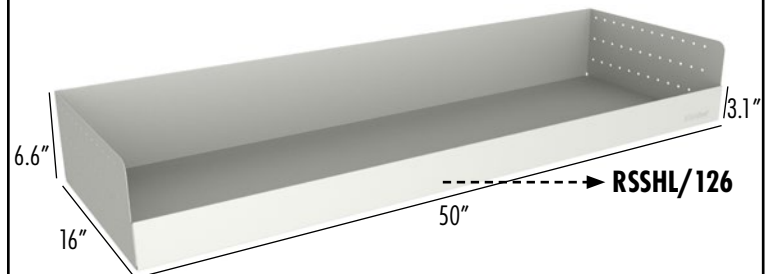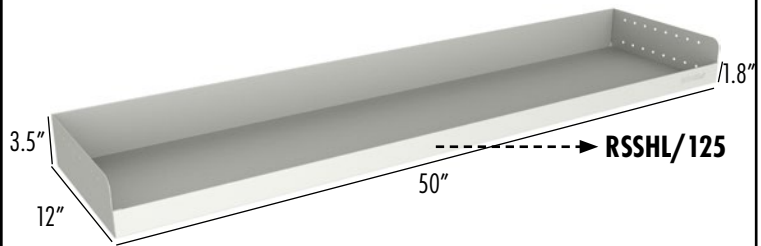



⚠ ATTENTION: PLEASE READ ALL INSTRUCTIONS BEFORE ASSEMBLING/INSTALLING THIS PRODUCT

⚠ WARNING

ANY ALTERATIONS, UNINTENDED OR UNAPPROVED WORK/USE OF THIS PRODUCT COULD CREATE A HAZARDOUS CONDITION THAT CAN CAUSE DEATH, PERSONAL INJURY OR PROPERTY DAMAGE.

The RolaCase shelves are secured to the assembled shelving bays with the use of "Phillips Head Dog Point Screws" which are supplied with the purchase of any shelving bay type (sold separately)


A Begin by locating the shelf and carefully sliding it in between a compatible shelving bay frame.

Note that 8-Series shelves will only fit into 8-Series shelving bays, and 12-Series shelves will only fit into 12-Series shelving bays (all sold separately)

B Trial position the shelf in an ideal position anywhere on the perforated shelving frame (please note: the frame should be installed in the vehicle first) whilst ensuring the grid pattern on the shelf ends marries up with the holes on the twin posts. Note that RolaCase's shelves are very versatile within the shelving bays and can be secured in many different varying positions

C If you wish, you can use the disposable plastic plugs that come in our 'Starter' and 'Extension' frames (sold separately) to hold your shelf in place while deciding where to secure it

D Secure the selected shelf to the frame posts using a "P3" Phillips Head screwdriver or a cordless drill with a low torque setting and the screws. Please ensure you do not over tighten these screws as it is unnecessary and it may also strip the thread. Depending on the type of shelf you are securing, you may be using either 4 or 6 screws per side, refer to image below:

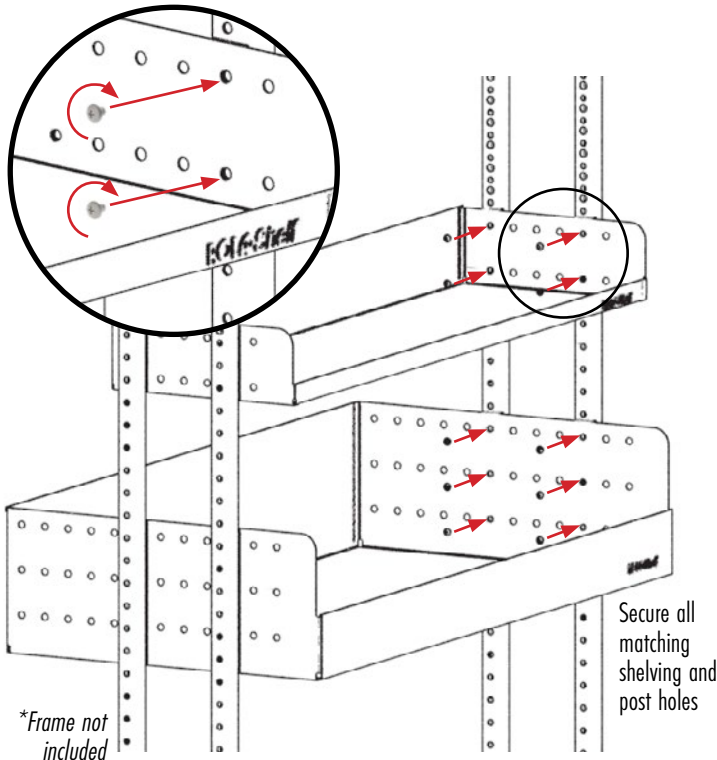


D Secure other side of the shelf

E Repeat this process for any other shelf you are installing and then once you are done, go through and double check that all screws are tight before placing any products or tools on the shelves

⚠ ATTENTION

IMAGES USED IN THIS GUIDE MAY VARY SLIGHTLY DEPENDING ON YOUR MODEL

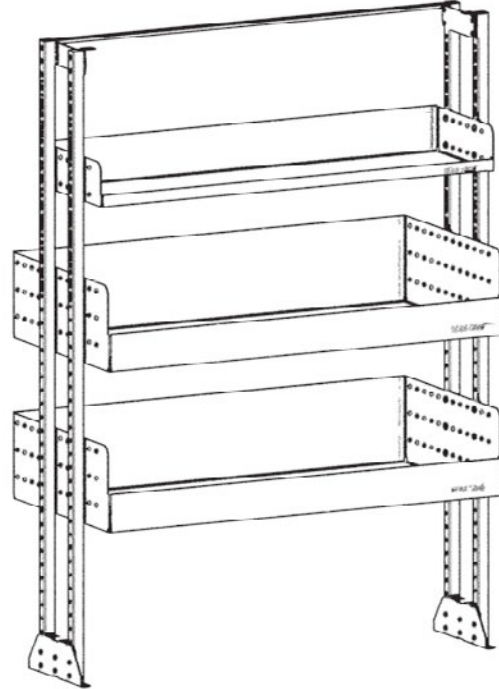

Example of shelving fitted on bay



Example of shelving fitted in a Ford Transit

For further details please go to www.rolacase.com